## **Install Guide for In-ceiling Speakers**

#### Installing with an install bracket

- 1. Determine placement of speakers in the room.
- Install the speaker bracket by nailing or stapling the wings of the speaker bracket to the studs of the wall or ceiling. The bracket has a 1/2" lip that should face into the room. This lip will provide a guide for the sheetrock installers to cut the hole for the speaker.
- Run speaker wire from the audio equipment location to the speaker bracket. Make sure you have plenty of wire at the speaker location to connect to the speaker.
  Destination Audio recommends three feet.
- If you are running wire through studs, consider using nail guards to protect your wires from sheetrock nails or screws.

#### Installing without an install bracket

- Determine the location of the speakers in the room.
- Run speaker wire from the audio equipment location to the speaker location. Make sure you have plenty of wire at the speaker location to connect to the speaker.
  Destination Audio recommends three feet.
- 3. Secure the speaker wire to a stud or floor joist with a twist tie or staple. If you are using a staple, be careful not to nick or pierce the wire and leave the wire loose enough that you can reach into the hole you will cut into the sheetrock. Make sure the wire is back far enough that the sheet rockers blade or router will not cut it. If you are running your wire through studs, consider using nail guards to protect your wires from sheetrock nails or screws.
- 4. After the sheetrock or finish material has been installed, use the cutout template that came in the speaker box to cut a hole in the sheetrock. Be mindful of the studs or floor joists as you place the template.

#### Installing the speaker

- Locate the speaker wire previously run to the speaker location and connect the speaker wire to the terminal connections on the rear of the speaker. The positive conductor connects to the red terminal and the negative conductor connects to the black terminal
- The speaker is secured by the four dog ears. Tighten the four screws on the front of the speaker, which will rotate the dog ears out, then pull them up to secure the speaker. Tighten the screws until they are snug. Do not over tighten as this may make it difficult to install the grill.
- 3. Place speaker grill on speaker.

#### Painting the speaker

When you received you speaker, a paint shield was included. This shield can be used to protect the speaker when you paint the speaker rim. Painting the speaker grill should be done with a sprayer set to fine. Remove the grill from the speaker, and place it on a flat surface. Do not use a brush or roller on the speaker grill as it will clog the holes. Be sure to remove the paint shield before reinstalling the grill and using the speakers.

### Speaker adjustment

Depending on the model of Destination Audio speaker you are installing, it may have a pivoting tweeter and/or a +3/-3 dB gain switch. Adjust these to obtain the desired sound.



# 10 Year Limited Warranty

Destination Audio warrants to the original purchaser only that this product will be free from defects in materials and workmanship for a period of ten (10) years. provided the speaker was purchased from a Destination Audio Authorized Dealer. Defective products must be shipped, prepaid, with proof of purchase, to the Destination Audio Authorized Dealer from whom the speakers were purchased, or to Destination Audio at the address listed below. COD shipments will be refused. If possible, ship this product in the original shipping container to lessen the chance of transit damage. In all cases, the risk of loss or damage in transit is to be borne by the purchaser.

If, upon examination it is determined that the unit was defective in materials or workmanship during this warranty period, Destination Audio will, at its option, repair or replace this product at no additional charge, except as set forth below. If this model is no longer available and can not be repaired effectively. Destination Audio, at its sole option, may replace the unit with a current model of equal or greater value. In some cases where a new model is substituted, a modification to the mounting surface may be required. If mounting surface modification is required, Destination Audio assumes no responsibility or liability for such modification. All replaced parts and product become the property of Destination Audio. Products replaced or repaired under this Warranty will be returned to the original retail purchaser, within a reasonable time, freight prepaid.

This Warranty does not include the service or parts to repair damage caused by accident, disaster, misuse, abuse, negligence, inadequate packing or shipping procedures, commercial use, voltage inputs in excess of the rated maximum of the unit, or service, repair or modification of the product which has not been authorized or approved by Destination Audio. This Warranty also excludes normal cosmetic deterioration caused by environmental conditions.

This Warranty will be void if the Serial Number of the product has been removed. tampered with or defaced. This Warranty is in lieu of all other expressed warranties. If the product is defective in materials or workmanship as warranted above, the purchaser's sole remedy shall be repair or replacement as provided above. In no event will Destination Audio be liable for any incidental or consequential damages arising out of the use or inability to use the product, even if Destination Audio or Destination Audio Authorized Dealer has been advised of the possibility of such damages, or for any claim by any other party. Some states do not allow the exclusion or limitation of consequential damages, so the above limitation and exclusion may not apply. All implied warranties on the product are limited to the duration of this expressed Warranty. Some states do not allow limitation on the length of an implied warranty. If the original retail purchaser resides in such a state, this limitation does not apply.

